


**XTAR®**  
**D36 5800**  
Flood & Spot light Diving  
Flashlight with OLED Screen

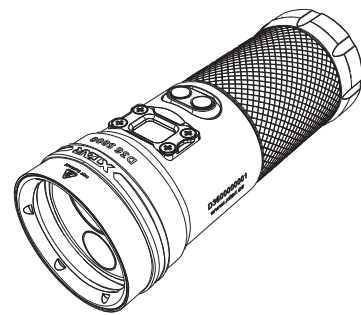

**Introduction**


D36 5800 is an all-in-one smart diving flashlight. With built-in 4200lm floodlight, 1600lm spotlight, this flashlight also adopts an intelligent OLED screen. Two press-type switches enable you to switch easily among 9 lighting modes. 10.8V battery pack provides big power to ensure up to 45min runtime even with 5800lm output.

**Tips**

1. Please make sure contact surface towards the head.
2. Considering flashlight consumes power when it is off, please remove the battery when the flashlight is not used for a long time.
3. Do not wipe the battery with strong corrosive substance.
4. Flashlight fails to operate.

Possible Reasons	Solutions
Battery is exhausted or not compatible	Change battery
Battery is installed incorrectly	Make sure the contact surface towards the head
Poor contact	1. Clean the contact surface of battery with alcohol 2. Tighten the head or tail cap

5. For more and updated information, please visit [www.xtar.cc](http://www.xtar.cc)

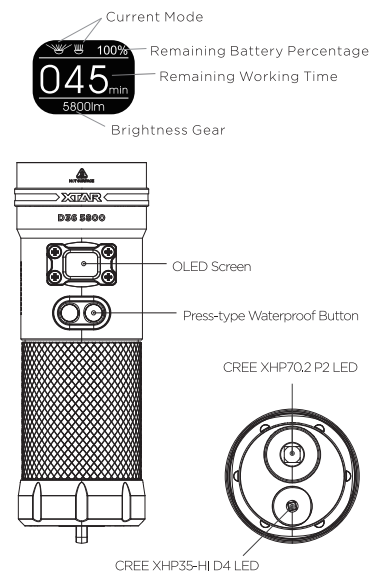

**Technical parameter**

ANSI	Floodlight				Spotlight			
	High	Mid	Low	Blink	High	Mid	Low	SOS
☀️	4200LM	2100LM	1200LM	2100LM	1600LM	750LM	400LM	750LM
🕒	74min	148min	342min	/	155min	407min	892min	/
📏	215m							
💡	11640cd							
📏	1.5m							
🏊	IPX8(Underwater 100m)							
📏	Φ57mm(head) × Φ52.5mm(body) × 167.5mm(length)							
📏	454.3g(Battery excluded)							
🔋	Turbo (Floodlight+Spotlight)		Luminance		Runtime			
			5800LM		45min			

Notes:  
1. Above-mentioned parameters (tested by using XTAR 10.8V battery pack) are approximate and may differ depending on battery and environment.  
2. Working Voltage: 9-12.6V.

**Operation**

- I. Install battery.**  
Unscrew tail cap, and install the battery pack with contact surface towards head.
- II. Switch modes**  
Press right button to switch different modes. In turn of ON---floodlight---spotlight---floodlight+spotlight---OFF.
- III. Choose lightness.**  
1. Press right button to turn the flashlight on, and it will be 4200lm output, floodlight, by default.  
2. Press left button to switch lightness. In turn of 4200lm---2100lm---1200lm in floodlight mode; in spotlight mode, 1600lm---750lm---400lm.
- IV. Hidden Mode**  
1. Blink  
In floodlight mode, press left button for 1.5s to enter Blink mode (2100lm). Press left button back to high light of previous mode.  
2. SOS  
In spotlight mode, press left button for 1.5s to enter SOS mode (750lm). Press left button back to high light of previous mode.
- V. Lock/Unlock buttons**  
1. When the flashlight is off, long press right button, then it will be lightened up in 4200lm; the screen shows an unlocked icon and remaining power, after 3s, it becomes locked.  
2. When the flashlight is locked, long press right button, the screen shows a locked icon and remaining power, until it becomes unlocked and back to 4200lm.
- VI. OLED screen**  
1. OLED screen shows current mode, brightness gear, battery percentage, remaining working time and so on.  
2. Press left button twice to turn off screen. Then press each button to lighten it.
- VII. Low power indication**  
When the power is insufficient, the screen shows "0%" and "000min", the brightness will become 2% of highest lumens of current mode to remind you to charge battery asap.

**Customer service**

Please provide warranty number to dealer to get after-sales service.  

- 15 days free replacement.
- 24 months free repair (for flashlight). If problems develop beyond 24 months, we will offer free repair service but charge for parts used. The distributor will inform you material fee or related freight if any before repair.
- 12 months free repair (for battery pack).
- Lifetime technical support.

Note:  
1. Damage caused by misuse or intentional force is not covered by the warranty.  
2. You are recommended to store warranty info online: register and login [www.xtar.cc](http://www.xtar.cc) - Member Center - Warranty Information.  
3. Warranty number (9-11 digit) can be found on the package or product.

Global After-sales Email: [service@xtar.cc](mailto:service@xtar.cc)  
US After-sales Email: [serviceus@xtar.cc](mailto:serviceus@xtar.cc)

**Anti-fake inquiry**

1. Scratch the anti-counterfeiting label on the package to get 18-digit number.
2. Input the number into the query page on [www.xtar.cc](http://www.xtar.cc) (Contact Us - Anti-fake).




**Warning: Do not radiate the light directly towards the eyes, serious injury or blindness could occur by misuse.**



Shenzhen XTAR Electronics Co., Ltd  
Address: 5th Floor, No.77 Xinhe Rd, Shangmugu, Pinghu Area, Longgang District, Shenzhen, Guangdong, China  
Tel: +86-755-25507076 Fax: +86-755-25507076  
Website: [www.xtar.cc](http://www.xtar.cc) Email: [info@xtar.cc](mailto:info@xtar.cc)  
Zip Code: 518111

**XTAR®**  
**D36 5800**  
泛聚光OLED屏显潜水手电

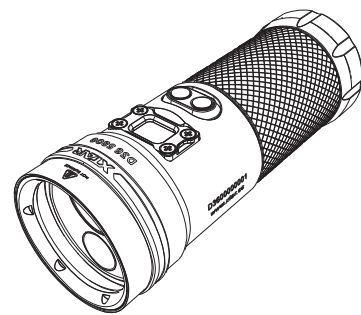

**简介**


D36 5800是一款智能一体化潜水手电。这款手电内置最大4200流明的泛光灯和最大1600流明的聚光灯，且带有智能OLED显示屏。两个按键使您可以在九种模式中轻松切换。10.8V电池包提供巨大能量，确保手电在5800流明输出时也能工作45分钟。

**提示**

1. 将电池包的接触表面朝头部安装。
2. 考虑到手电筒待机时会消耗电量，当手电筒长时间不用时，请将电池取出。
3. 请勿用强腐蚀性物质擦拭电池。
4. 手电筒不工作：

可能原因	解决办法
电池电量耗尽或不兼容	更换电池
电池安装不当	将电池包的接触面朝向头部
接触不良	1. 用酒精清洁电池的接触表面 2. 拧紧手电筒头盖或尾盖

5. 了解更多更新的信息，请访问[www.xtar.cn](http://www.xtar.cn)

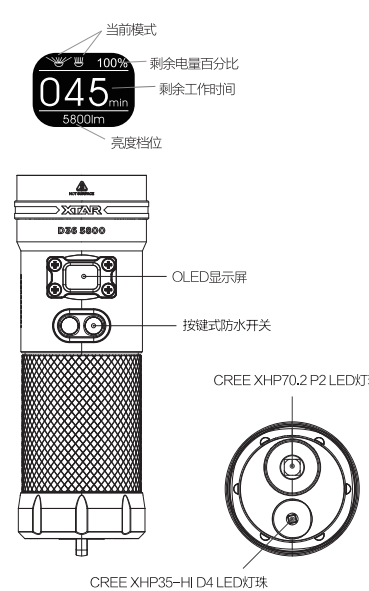

**技术参数**

ANSI	泛光				聚光			
	高亮	中亮	低亮	Blink	高亮	中亮	低亮	SOS
☀️	4200LM	2100LM	1200LM	2100LM	1600LM	750LM	400LM	750LM
🕒	74min	148min	342min	/	155min	407min	892min	/
📏	215m							
💡	11640cd							
📏	1.5m							
🏊	IPX8(水下100m)							
📏	Φ57mm(头部直径) × Φ52.5mm(筒身直径) × 167.5mm(长度)							
📏	454.3g(不含电池)							
	极亮 (泛光+聚光)	亮度		续航时间				
		5800LM		45min				

注意:  
1. 以上参数 (由爱克斯达10.8V电池包测试得出) 均为近似值, 可能会随着电池和使用环境而发生变化。  
2. 工作电压: 9-12.6V.

**操作**

- I. 安装电池**  
拧开手电筒尾盖, 将电池包的接触面朝手电筒头部安装。
- II. 切换模式**  
单击右键切换模式, 顺序是 开机---泛光---聚光---泛光+聚光---关机。
- III. 调节流明**  
1. 单击右键开机, 默认泛光高亮档4200lm。  
2. 单击左键切换亮度档位。  
泛光模式下, 顺序为4200lm---2100lm---1200lm;  
聚光模式下, 顺序为1600lm---750lm---400lm。
- IV. 隐藏模式**  
1. 闪烁  
泛光模式下, 长按左键1.5秒进入Blink模式(2100lm)。单击左键返回泛光高亮档。  
2. SOS  
聚光状态下, 长按左键1.5秒进入SOS模式(750lm)。单击左键返回泛光高亮档。
- V. 锁键及解锁**  
1. 关机状态下, 长按右键可开机点亮聚光4200lm, 屏幕出现未锁图标及剩余电量, 3秒后进入锁键状态。  
2. 锁键状态下, 长按右键屏幕出现已锁图标及剩余电量, 直到按键解锁并返回聚光4200lm。
- VI. OLED显示屏**  
1. OLED显示屏, 显示当前模式、亮度档位、电量百分比和剩余工作时间等信息。  
2. 左键快按2次, 关闭屏幕。单击任意键点亮屏幕。
- VII. 低电量提示**  
电池电量不足时, 屏幕上显示"0%"和"000min", 同时手电亮度降为当前模式最高流明的2%, 提醒您尽快给电池充电。

**售后服务**

请向经销商提供保修编号以获得售后服务。  

- 15天免费换新。
- 手电筒2年内免费保修, 若问题发生在2年之后, 我们将提供免费维修服务, 但收取所用零件的费用。经销商会在维修前通知您材料费或相关运费。
- 电池包1年内免费保修。
- 终身技术支持。

注意:  
1. 因用户使用、保管不当而产生的故障不享有免费包换和保修。  
2. XTAR建议您注册网络版保修卡:  
登入[www.xtar.cn](http://www.xtar.cn)—注册—登入—会员中心—保修信息  
3. 保修编号 (9-11位) 可在包装或产品上找到。

售后服务邮箱: [service@xtar.cc](mailto:service@xtar.cc)

**防伪查询**

1. 刮开包装上的防伪标签, 得到18位数字。
2. 将该号码输入[www.xtar.cn](http://www.xtar.cn)上的查询页面 (联系我们 - 防伪查询)。



**警告: 请不要将手电直射眼睛, 否则可能因误用而造成严重伤害或失明。**



深圳市爱克斯达电子有限公司  
地址: 广东省深圳市龙岗区平湖街道木古社区新河路77号5楼  
电话: (+86) 755-25507076 传真: (+86) 755-25507076  
官网: [www.xtar.cn](http://www.xtar.cn) 邮箱: [info@xtar.cc](mailto:info@xtar.cc)  
邮编: 518111